

Installation Instructions

SUPERCARE

RIMLESS IN-WALL TOILET SUITE

Installation of Toilet Seat and Cleaning

It is recommended that toilet seat and cover be installed after all trades are finished

Note:

Installation to be in accordance with AS/NZS 3500 series of Standards and/or local regulations.

All measurements for roughing-in should be taken from finished wall/floor. It is strongly recommended by the manufacturer that installation is carried out by a licensed plumber.

Cleaning Recommendations

The high quality vitreous china finish on all sanitary ware can be maintained by simply using mild soapy water and wiping over.

Sanitary ware should not be cleaned with abrasive materials e.g. steel wool/scourers. Do not use any corrosive or abrasive cleaning agents containing acids or scouring agents as this may lead to surface damage.

Bleaches can also discolour seats and hinges and therefore should not be used.

If your toilet has metal hinges they should only be cleaned with a mild liquid domestic cleaner, with soft soapsuds or Steel & Chrome cleaner


After cleaning, rinse with clean water and polish with a clean soft cloth.

INSTALLATION INFORMATION

S-Trap


1

1. Rough in position of water inlet, waste outlet and floor fixing bracket holes. Ensure inlet connection extends 60mm from finished wall. Drill holes for floor fixing bracket then fix brackets to floor.

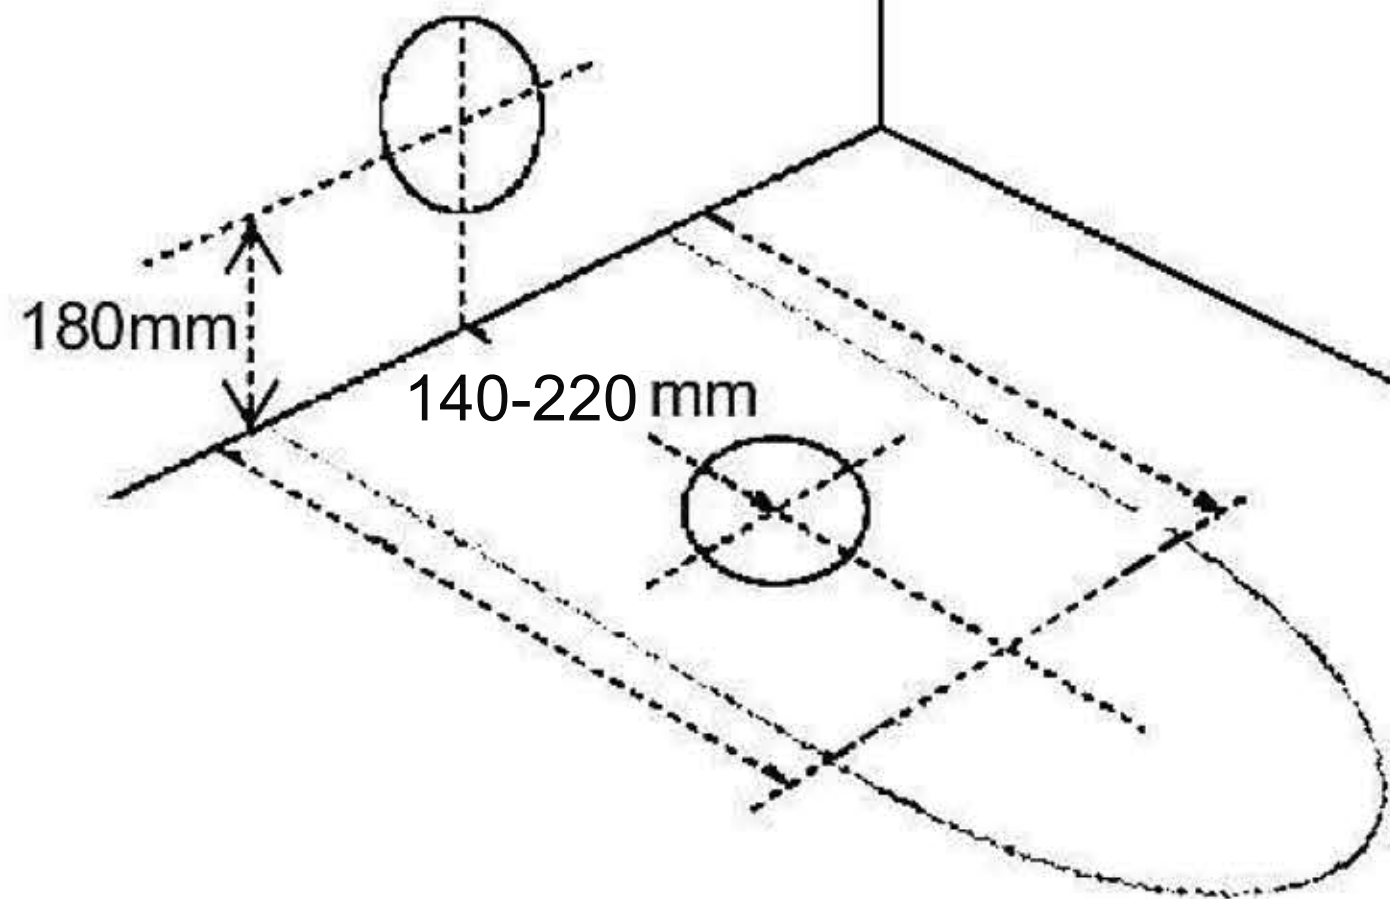

2


2. Lubricate the fins of the pan bend and position into waste pipe. The knuckle bend must be secured to the wall to avoid leak.

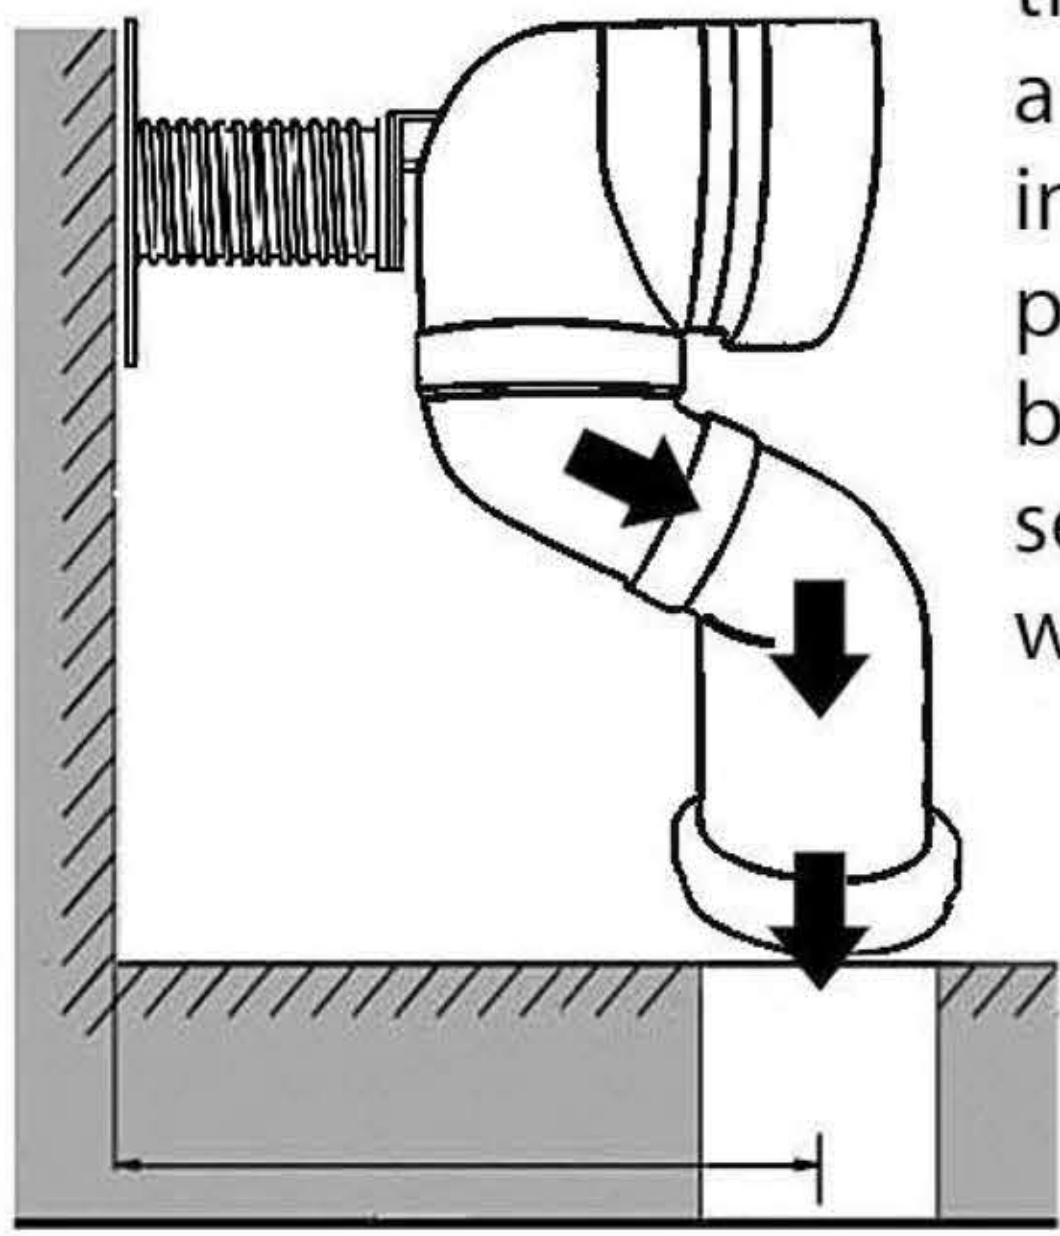

140-220mm

3


3. Lubricate rubber on the exposed connector end

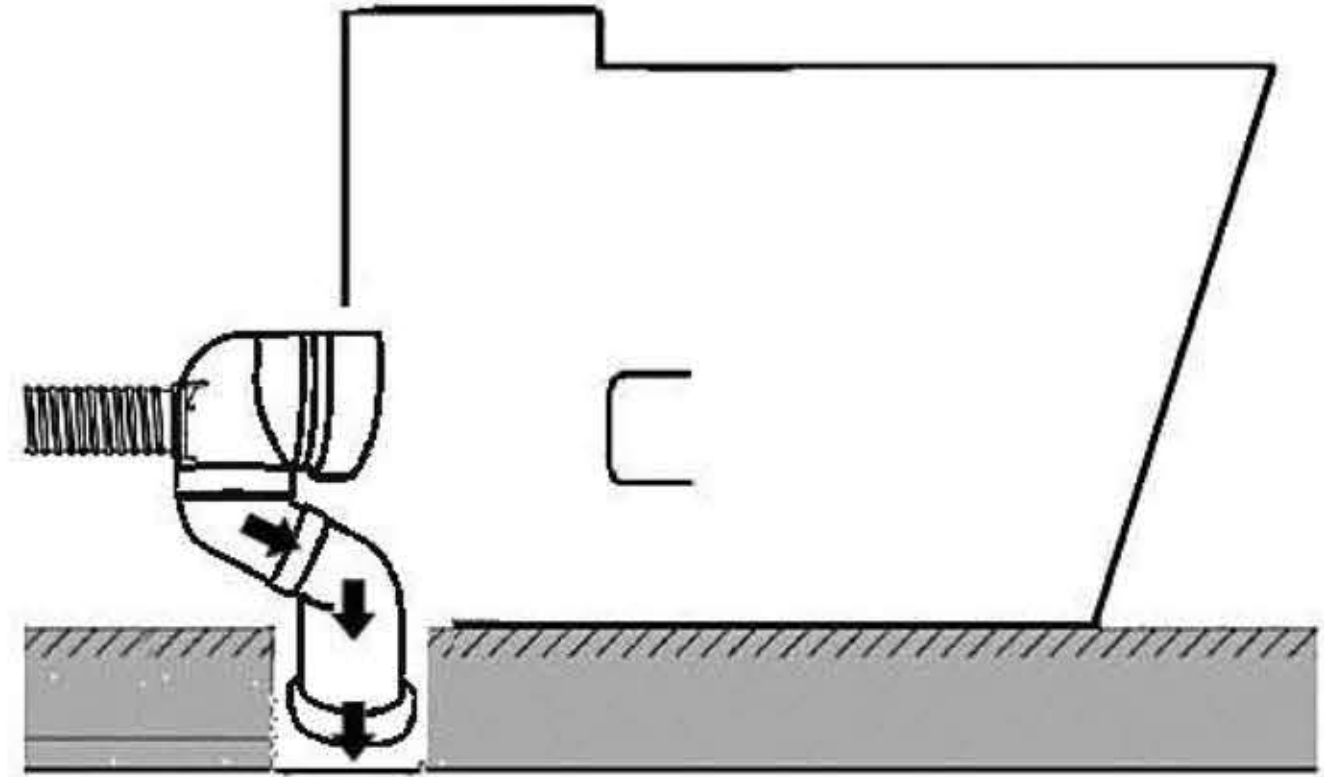

P Trap

4


4. Align and push fully assembled toilet back to the wall

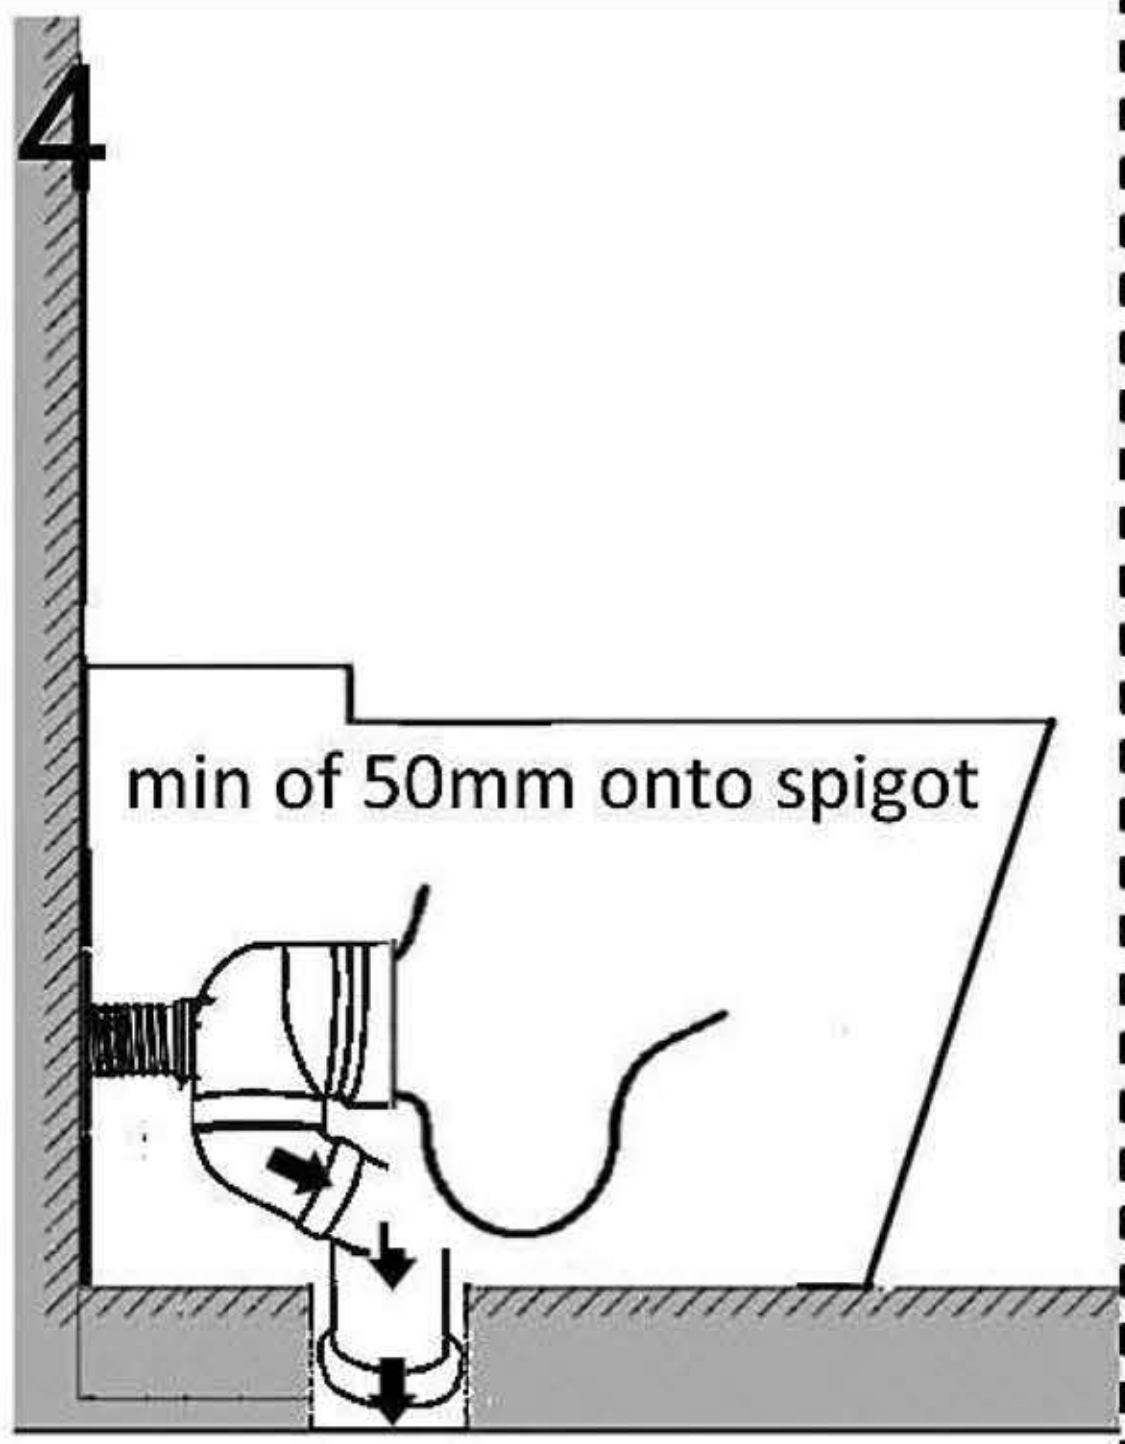

min of 50mm onto spigot

5


5. Set up waste pipe so that the end of the pan collar extends 180mm from the finished wall.

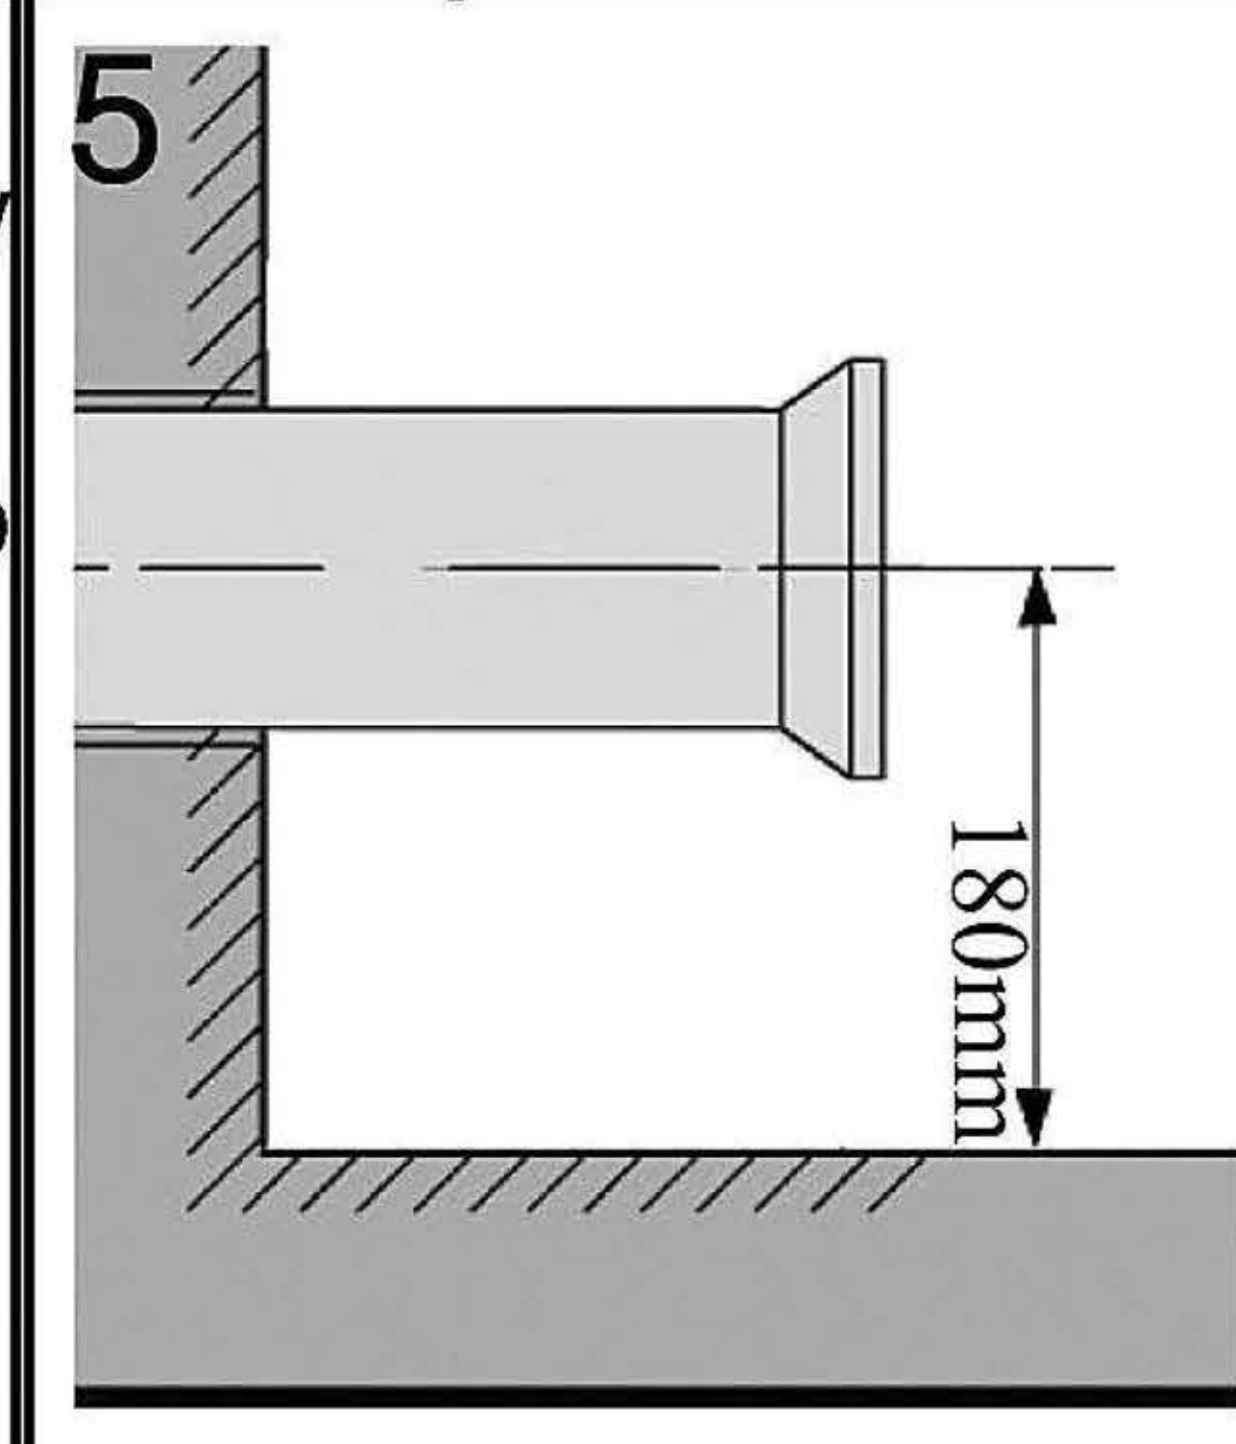

180mm

6

6. Align and push fully assembled toilet back to the wall, connecting pan spigot to pan collar. Bucket flush and check for leaks. Due to the design, weight, and stability of the toilet, a silicone adhesive is recommended and accepted by manufacturer for floor based Fixing. Please ensure all wet area are completely sealed.

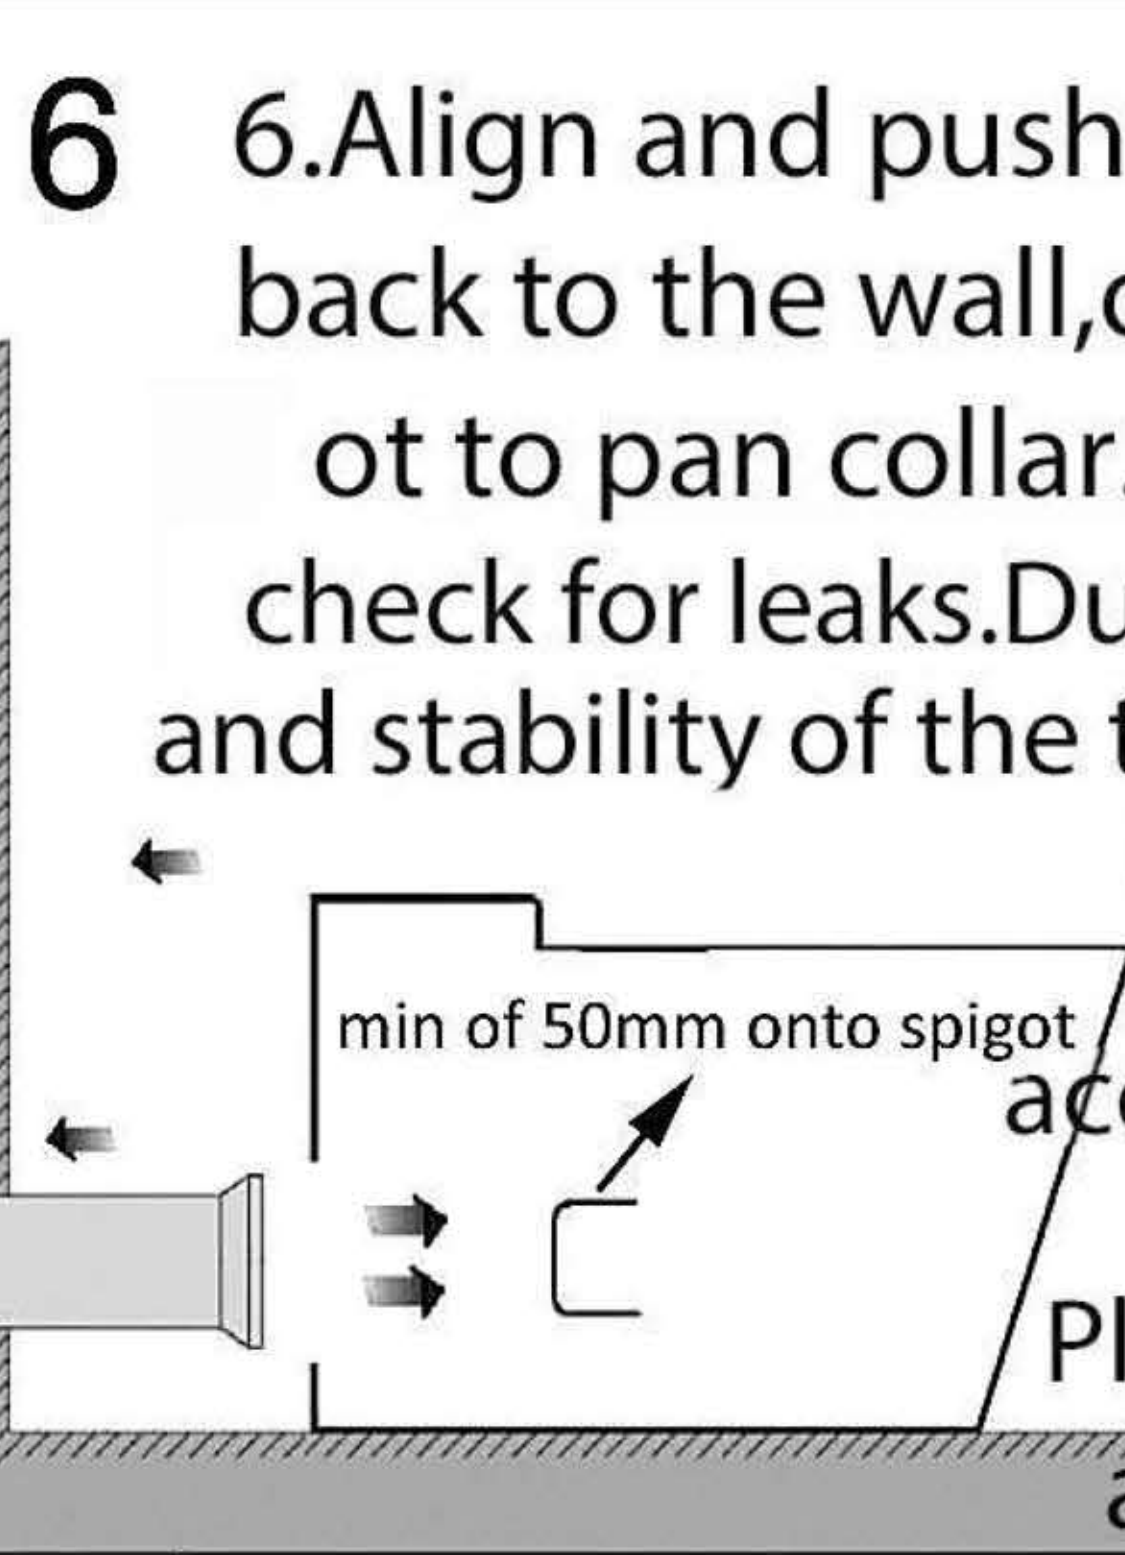

min of 50mm onto spigot

Toilet Seat installation Instruction

1. Please separate the black rubbers from the screw.
2. Insert the rubbers into the pan holes. Put the screw with the white bracket on the pan and screw into the rubber(do not tighten).
3. Push the seat (press and hold the chrome button inside the seat) onto the metal pin (on the white bracket), and adjust the pin position to make sure the seat is in a right position. Then take off the seat and tighten the screws to secure the brackets.
4. Put the metal cover onto the brackets, and the seat.

